



SAFARI




100 32 11
5000 1000





SAFARI

HOW TO PLAY

- 
- Insert coin(s). Animated hunter appears in the hut.
 - By using the hand grip control, the hunter can be moved up or down, right or left on the TV screen. Targets are shot by pulling the trigger on this control.
 - To adjust the angle of the rifle, use the short lever.
 - Target animals are birds(300 points), lions(200 points), deer(100 points) and buffalos(100 points) which appear at random on the screen and move right to left or left to right.
 - While the hunter is outside the hut he must be careful to avoid the moving animals. If hit he is knocked down and penalized time and reset into the hut.
 - Play time is 90 seconds but extended time is awarded after score reaches 3000 points.

FEATURES

- 
- 
- As score reaches 2000, 4000, 8000, & 8000 targets move faster and faster.
 - Hunter can be moved anywhere on the screen.
 - Previous High Score feature keeps the days high score on display for all to challenge.
 - Solid state circuitry for dependable trouble free operation.
 - Authentic sounds of gunshots and screams of animals as they are hit.

SPECIFICATIONS

Height	65" (1640 mm)
Width	26" (650 mm)
Depth	31" (790 mm)
Weight	187 lbs (85 kg)
Power	195 W



Manufactured by

TAITO CORPORATION

Mailing address: Central P.O. Box 1164,
Tokyo, Japan

Cable Address: EPTRA TOKYO

Telex: J 22931 Tokyo

Printed in Japan